Video-inserter Attention! RL4-NAC08 Do not connect to vehicle monitor Damage to hardware!



Compatible with Opel, Citroen, Peugeot and Toyota vehicles with NAC or RCC infotainment and 7inch or 8inch monitor

Video-inserter for front- and rear-view camera and two additional video inputs

Attention!
Only for vehicles
with 7 inch or 8 inch monitors
(For 10.25 inch monitors
use RL4-NAC12)

Product features

- Video-inserter for factory-infotainment systems
- 1 CVBS Input for rear-view camera
- 1 CVBS Input for front camera
- 2 CVBS video-inputs for after-market devices (e.g. USB-Player, DVB-T2 tuner)
- Automatic switching to rear-view camera input on engagement of the reverse gear
- Automatic front camera switching after reverse gear for 10 seconds
- Activatable parking guide lines for the rear-view camera (not available for all vehicles)
- Video-in-motion (ONLY for connected video-sources)
- Video-inputs NTSC compatible



Contents

1. Prior to installation

1.1.	Delivery contents
1.2.	Checking the compatibility of vehicle and accessories
1.3.	Warning notes
1.4.	Connection Video-Interface
1.5.	Settings of the 8 Dip switches (black)
1.5.1.	Adjustment – power supply output (dip 1)
1.5.2.	Enabling the interface's video inputs (dip 2-3)
1.5.3.	Rear-view camera setting (dip 5)
1.5.4.	Activating – front camera back switching (dip 6)
1.5.5.	Choosing the corresponding head unit version (dip 8)

Settings of the 4 Dip switches (CAN function – red)

2. Installation

1.6.

2.1.	Place of installation – video interface
2.2.	Connection schema
2.3.	Connection - head-unit
2.3.1.	Connection – picture signal cable
2.3.1.1.	Low version head unit (1 x 4 PIN HSD)
2.3.1.2.	High version head unit (2 x 4 PIN HSD)
2.3.2.	Connection – Power / CAN
2.3.3.	Installation with analogue connection (without CAN-Bus)
2.4.	Power supply output
2.5.	Connection - video sources
2.5.1.	Audio insertion
2.5.2.	After-market front camera
2.5.3.	After-market rear-view camera
2.5.3.1.	Case 1: Video-interface receives the reverse gear signal
2.5.3.2.	Case 2: Video interface does not receive the reverse gear signa
2.6.	Connection - external keypad
2.7.	Picture settings and guide lines

3. Interface operation

- 3.1. By NAVI button3.2. By external keypad
- 4. Specifications
- 5. FAQ Trouble shooting
- 6. Technical support

Sage 2



Legal Information


By law, watching moving pictures while driving is prohibited, the driver must not be distracted. We do not accept any liability for material damage or personal injury resulting, directly or indirectly, from installation or operation of this product. Apart from using this product in an unmoved vehicle, it should only be used to display fixed menus or rear-view-camera video when the vehicle is moving (for example the MP3 menu for DVD upgrades).

Changes/updates of the vehicle's software can cause malfunctions of the interface. Up to one year after purchase we offer free software-updates for our interfaces. To receive a free update, the interface has to be sent in at own cost. Wages for de-and reinstallation and other expenditures involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

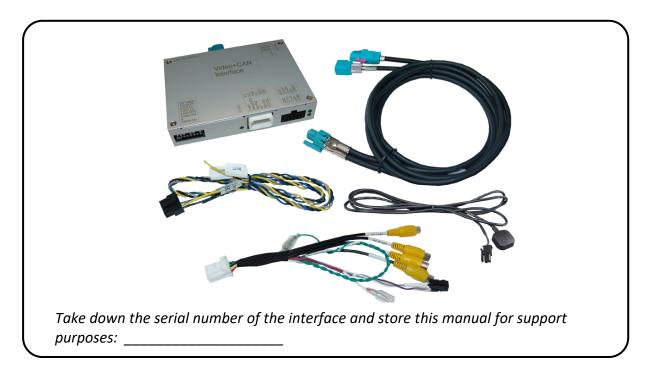



1.2. Checking the compatibility of vehicle and accessories



Compatibility

Brand	Compatible vehicles	Infotainment systems
Citroen	Berlingo (K9) since 09/2018, C3 since 01/2017, C3 Aircross since 11/2017 C4 (N) since about 2017 til 05/2018, Grand (C4) SpaceTourer since model	NAC or RCC with 7inch or 8inch touch monitor. Continental or Bosch head-unit
	year 2018, C4 Picasso since model year 2017, Dispatch since model year 2016, Jumpy since model year 2016	For Continental High version an additional cable CAB-HSD-MF026 might be required
Opel	Combo since model year 2018 Corsa F since 07/2019 Crossland X since model year 2017 Grandland X since model year 2017 Mokka B since 09/2020, Vivaro since model year 2020 Zafira Life since model year 2020	Navi 5.0 IntelliLink 8inch (NAC low Continental), Multimedia Radio 7inch (RCC Bosch), Multimedia Navi Pro 7inch, Multimedia 8inch
Peugeot	208 since 02/2017 til 03/2019, 208 II since 06/2019, 2008 since 02/2017 til 06/2019, 2008 II since 11/2019, 308 II since 07/2017 til 06/2021, 3008 II since 10/2016, 508 since 02/2017 til 08/2018, 508 II since 10/2018, 5008 II since 02/2017, Expert III since 03/2016, Partner III since 06/2018, Rifter since 09/2018, Traveller since 09/2016	NAC or RCC with 7inch or 8inch touch monitor. Continental or Bosch head-unit For Continental High version an additional cable CAB-HSD-MF026 might be required
Toyota	ProAce since model year 2016	RCC (Bosch)



Limitations

Video only The interface inserts ONLY video signals into the infotainment.

For audio inserting, use the possibly existing factory audio-AUX-input or a FM-modulator. If 2 AV-sources shall be connected to the infotainment, for

audio switching an additional electronic part is required.

Factory rear-view camera Automatic switching-back from inserted video to factory rear-view camera

is only possible while the reverse gear is engaged. To delay the switch-

back, an additional electronic part is required.

After market front camera The front camera will automatically be switched for 10 seconds after

disengaging the reverse gear. A manually front camera switching is

possible by external keypad.

Video input signal NTSC video sources compatible only.

NAC high-version If the two HSD connectors cannot be separated for the reconnection of the

white HSD socket, the separately available cable CAB-HSD-MF026 can

optionally be connected here.



1.3. Warning notes:

Damage to the head-unit is possible, if this RL4-NAC08 interface is installed to older Citroen / Peugeot SMEG or SMEG+ head-units (by Magneti Marelli)! Use this RL4-NAC08 interface only on Citroen/Opel/Peugeot/Toyota head-units NAC (by Continental) or RCC (Bosch). Designs and features – see the following pictures:





NAC-Systems







Furthermore, even when installed to the correct NAC systems, there is also **damage** to the head-unit possible if:

- -the 4pin HSD connectors of this harness are wrong-plugged
- -the 4pin HSD harness is connected to the vehicle monitor

Attention!

Do not connect to vehicle monitor

Damage to hardware!

Prior to installation, the head-unit's version has to be determined (see following page).



1.4. Checking the head unit's version

Prior to installation, it has to be determined if whether the head-units version is a

low version head-unit

(single black male 4pin HSD on backside)





Attention: Bosch Low Version requires different Dip 8 switch position (see following chapters)

OR

high version head-unit

(**double** black male 4pin HSD on the backside)




Please, carefully follow the manual for high or low version connection of the head unit and the assignment of the Dip-8 switch position!




1.5. Connectors - Video-Interface

The video-interface converts the video signals of connected after-market sources in a factory monitor compatible picture signal which is inserted in the factory monitor, by using separate trigger options. Further it reads the vehicle's digital signals out of the vehicle's CAN-bus and converts them for the video interface.

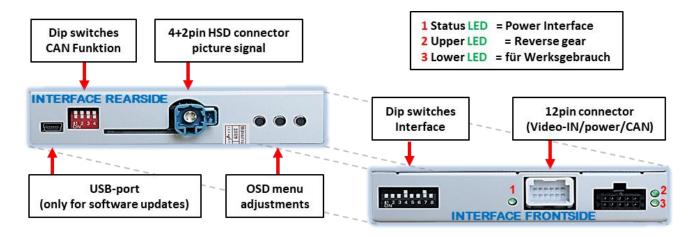

1.6. Settings of the 8 Dip switches (black)

 Some settings have to be selected by the 8 dip-switches at the video-interface. Dip position down is ON and position up is OFF.



Dip	Function	ON (down)	OFF (up)	
1	Power supply output (red wire)	+12V (max. 3A) when reverse gear is engaged incl. 10 seconds delay and +12V by manual switching to front camera by keypad	+12V (max. 3A) ACC	
2	CVBS AV1-input	enabled	disabled	
3	CVBS AV2-input	enabled	disabled	
4	No function		Set to OFF	
5	Rear-view cam type	after-market	factory or none	
6	Frontcam back-switching enabled disabled for 10 seconds		disabled	
7	No function		Set to OFF	
8	Monitor type	Low resolution monitor	High resolution monitor	
		If you do not know the resolution, test both settings. Power reset after change of dip switches necessary.		

See the following chapters for detailed information.

After each Dip-switch-change a power-reset of the Can-box has to be performed!



1.6.1. Adjustment – power supply output (dip 1)

If set to **ON**, the video interfaces' red wire will supply +12V (max 3A) with engaging the reverse gear and additionally 10 more seconds delay for the time of the front camera's backswitching after the reverse gear has been disengaged. Furthermore, the red wire's power supply for the front cam becomes active with manually front camera switching (short press of the external keypad).

If set to **OFF**, the video interfaces' red wire will supply permanent +12V ACC (max 3A).

Description of the power supply output: see chapter "Power supply output".

1.6.2. Enabling the interface's video inputs (dip 2-3)

Only the enabled video inputs can be accessed by switching through the interface's video sources. It is recommended to enable only the required inputs. Then the disabled inputs will be skipped while switching through the video interfaces inputs.

1.6.3. Rear-view camera settings (dip 5)

If set to **OFF**, the interface switches to factory picture while the reverse gear is engaged to display factory rear-view camera or factory optical park system picture. If set to **ON**, the interface switches to its rear-view camera input while the reverse gear is engaged.

1.6.4. Activating – front camera back-switching (dip 6)

If set to **ON**, the interface switches for 10 seconds from the rear-view camera to the front camera input after having disengaged the reverse gear. In addition, a manual switch-over to the front camera input is possible via keypad (short press) from any image mode. (Attend to correct adjustment of the power supply output (dip1)!

1.6.5. Head unit selection (Dip 8)

Dipswitch 8 is used to set the corresponding resolution of the factory monitor.

Dip switch position ON supports the low resolution monitor.

Dip switch position OFF supports the high resolution monitor.

Note: If you do not know the resolution, test both settings.

Note: Dip4 and 7 are out of function and have to be set to **OFF**.

After each Dip-switch-change a power-reset of the interface box has to be performed!



1.7. Settings of the 4 Dip switches (CAN function - red)

Dip position down is **ON** and position up is **OFF**.

Navigation / Sy5tem	Dip 1	Dip 2	Dip 3	Dip 4
NAC infotainments	OFF	OFF	OFF	OFF



Set all 4 dips to OFF.

After each Dip-switch-change a power-reset of the Can-box has to be performed!

2. Installation

Switch off the ignition and disconnect the vehicle's battery! The interface needs a permanent 12V source. If -according to factory rules- a disconnection of the battery has to be avoided, it should be sufficient to use the vehicle's sleep-mode. In case, the sleep-mode doesn't succeed, the battery has to be disconnected with a resistor lead.

The connection's power has to be checked for being start-up proven and permanent.

Before the final installation, we recommend a test-run of the interface. Due to changes in the production of the vehicle manufacturer, there's always the possibility of incompatibility.

2.1. Place of installation – video-interface

The video-interface is performed to be installed at the head unit's rear side.

Erfahrungswerte zu Einbauorten:


Radio/Navi in **Peugeot 2008 FY 2019** vehicles: Directly behind the display.

Head Units in **Peugeot 5008** and Opel **Grandland X** vehicles: Behind the centre console (for this, remove the panel in the passenger footwell).





2.2. Connection schema

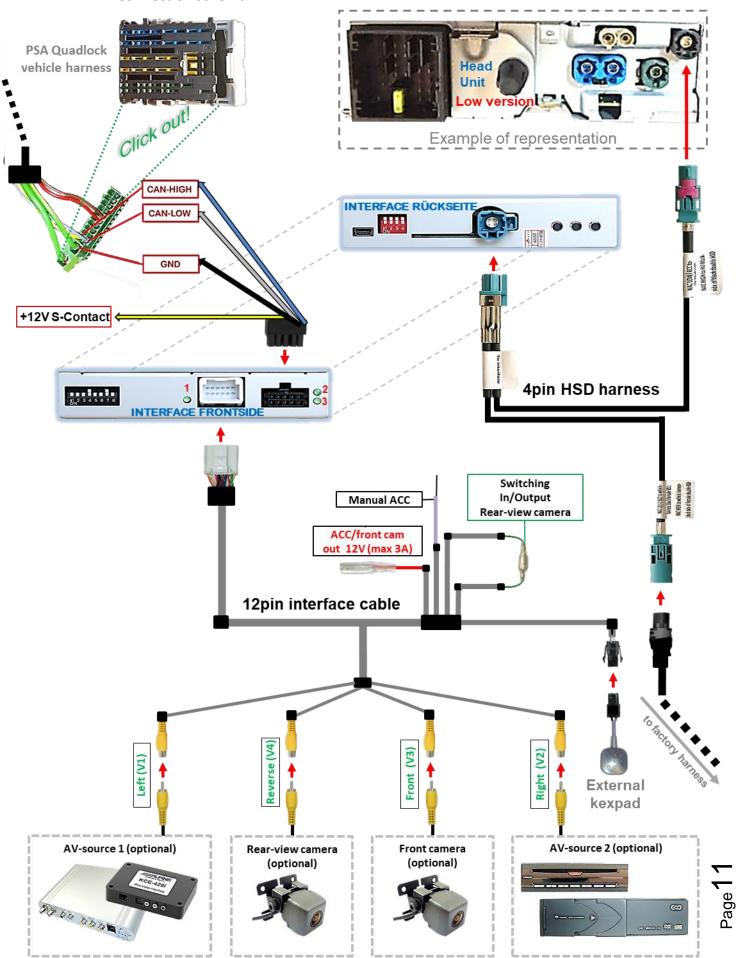


Version 13.04.2022 HW: CAM(V100)/(V52) RL4-NAC08

2.3. Connections to the head-unit


Remove the vehicle's head unit

2.3.1. Connection - picture signal cable

2.3.1.1. Low version head unit (1 X 4pin HSD)

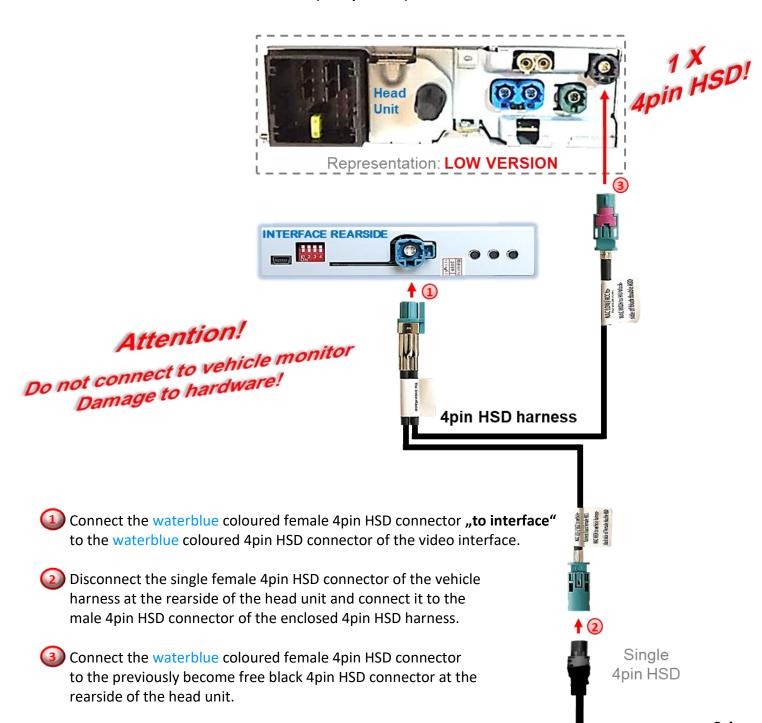

2.3.1.2. High version head unit (4 X 4pin HSD)

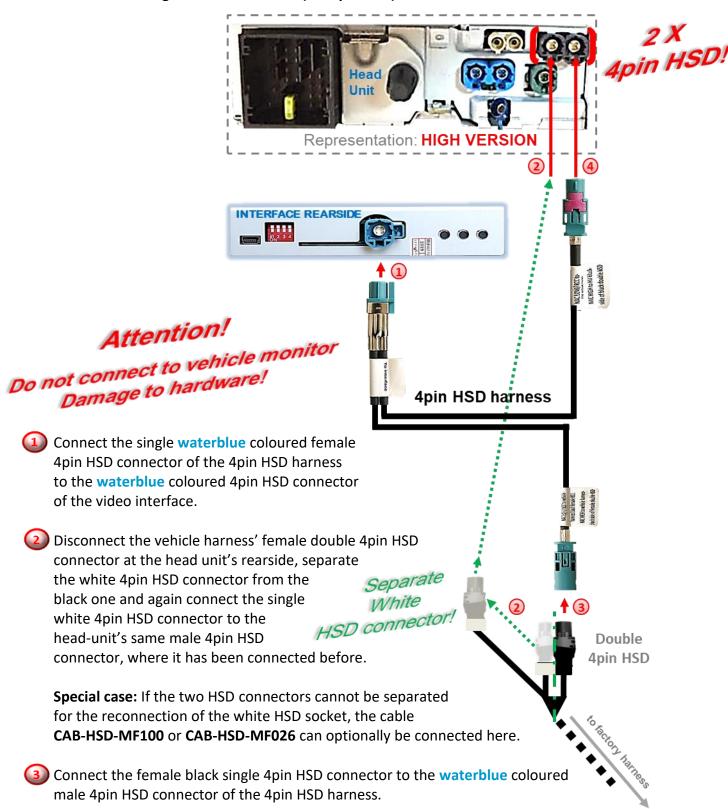

Connect the opposite waterblue coloured female 4pin HSD connector of the 4pin HSD harness to the previously become free male 4pin HSD connector of the head-unit.




Attention: The picture's representation of the double 4-pin HSD connector may be reversed. Make sure that the white 4pin HSD connector is reconnected to the same position of the head unit, where it has been connected before!

 2 age 13



2.3.2. Connection - Power / CAN

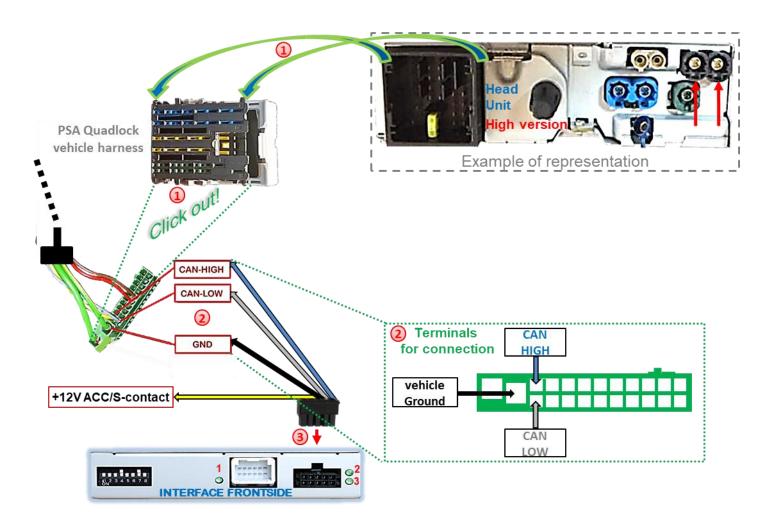

- Disconnect the female PSA Quadlock connector at the rearside of the head unit and click out the green female 22pin connector of the female PSA Quadlock connector.
- (2) Connect the singel four cables of the POWER / CAN cable to ACC and exactely to the 22pin connector's shown chambers, as the vehicle's cable colours may vary!
- Connect the power / CAN cable's female 10pin connector to the 10pin connector of the video interface.



Check 1

Exceptionally, the GM LAN communication may not succeed in all vehicles! If, after connecting the PNP harness, no interface LED lightens up while the ignition is turned on, the analog power supply needs to be done! (see following chapter)


Check 2

Exceptionally, the power supply to the video interfaces may not be interupted after switching to the vehicle's sleep mode. If the interface LEDs continue to shine even in the vehicle's sleep mode, please contact the support!

Version 13.04.2022 HW: CAM(V100)/(V52) RL4-NAC08




2.3.3. Installation with analogue connection (without CAN-Bus)

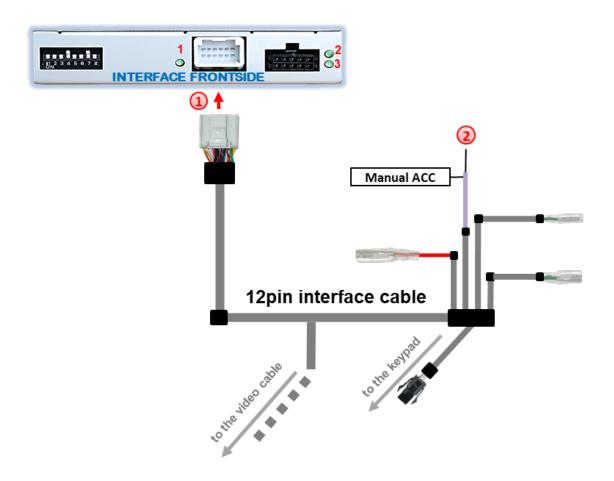

- 1 Connect the female 12pin connector of the 12pin interface cable to the male 12pin connector of the video interface.
- 2 Connect the 12pin interface cable's purple coloured wire Manual ACC to +12V ACC or to +12V S-contact terminal 86s +12V (e.g. glove compartment illumination).



2.4. Power supply output

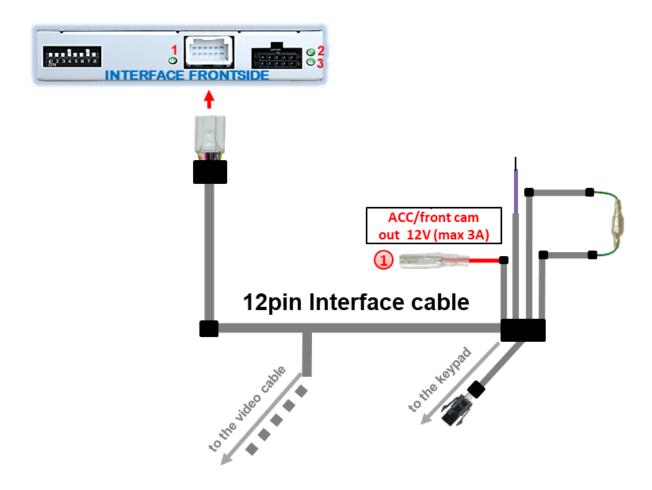


The red power supply output ACC/front cam out 12V (max 3A) can be used to power an external source and has a different assignment depending on the position of dip switch 1 (of the black 8 dips):

Dip	Function
Dip 1 ON	+12V (max. 3A) when reverse gear is engaged incl. 10 seconds delay after reverse gear is disengaged and +12V by manual switching to front camera by keypad (short press)
Dip 1 OFF	+12V (max. 3A) simulated ACC (while CAN has activity)

2.5. Connection - video sources

It is possible to connect two after-market video-sources, an after-market rear-view camera and an after-market front camera to the video-interface.

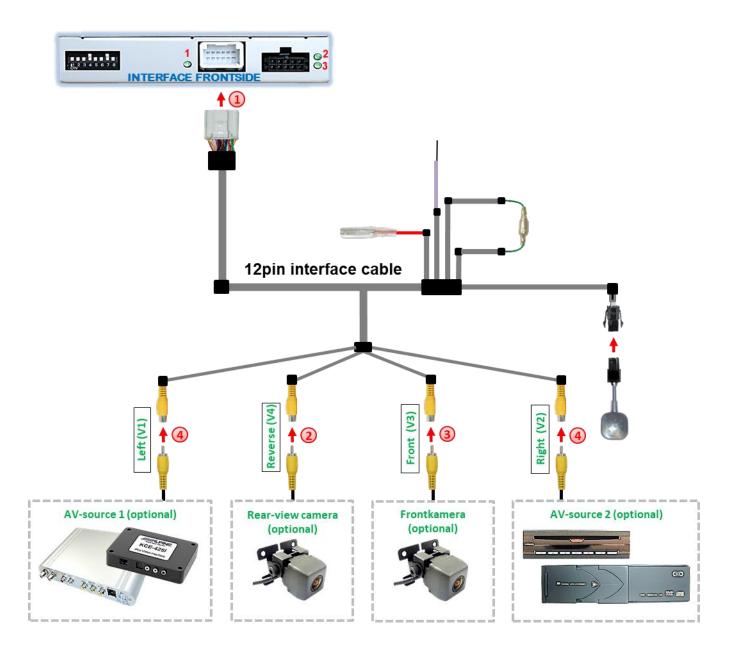

- Connect the 12pin interface cable's female 12pin connector to the male 12pin connector of the video-interface.
- 2 Connect the video RCA of the rear-view camera to the 12pin interface cable's female RCA connector "Reverse V4.
- (3) Connect the front camera's video RCA connector to the 12pin interface cable's female RCA connector "Front V3".
- 4 Connect the video RCA of the AV source 1 and 2 to the 12pin interface cable's female RCA connector "Left (V1)" and "Right (V2)".

²age 1 7




2.5.1. Audio insertion

This interface can only insert video signals into the factory infotainment. If an AV source is connected, the audio insertion has to be performed by a factory aux input or an FM modulator. The inserted video-signal can be activated simultaneously to each audio-mode of the factory infotainment.


If 2 AV-sources shall be connected to the infotainment, for audio switching an additional electronic part is required.

2.5.2. After-market front camera

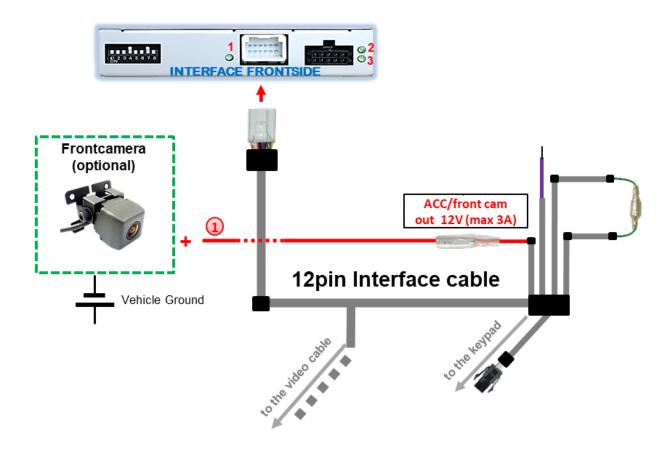

1 The red power supply output ACC/front cam out 12V (max 3A) can be used to power a front camera. If Dip 1 is set to ON (of the black 8 dips), the power supply output supplies +12V (max 3A) when the reverse gear is engaged and additionally 10 seconds delay after reverse gear is disengaged.

 Note: In addition, a manual switch-over to the front camera input is possible via keypad (short press) from any image mode. The power supply output supplies +12V then, too (if Dip 1 is set to ON and the front camera input is selected).




2.5.3. After-market rear-view camera

Some vehicles have a different reverse gear code on the CAN-bus which the video-interface is not compatible with. Therefore, there are two different ways of installation. If the video interface receives a signal of the reverse gear, the green wire "Reverse-OUT" of the 20pin cable should carry +12V while the reverse gear is engaged.

Note: Do not forget to set dip5 of the video-interface to **ON** before testing.

2.5.3.1. Case 1: Video interface receives the reverse gear signal

If the CAN-bus interface receives +12V on the green wire of the 20pin cable when reverse gear is engaged, it will automatically be switched to the rear-view camera input "Camera IN" while reverse gear is engaged.

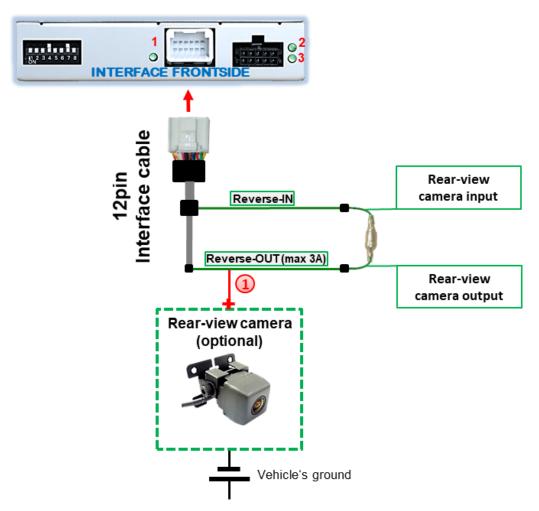


1 The 12 V power supply for the rear-view camera (max 3A) has to be taken from the green wire of the 20pin cable to avoid an unnecessary, permanent power supply to the camera electronic.

For the operation, both green cables "Reverse IN" and "Reverse OUT" have to remain connected.



2.5.3.2. Case 2: Video interface does not receive the reverse gear signal

If the video interface does <u>not</u> receive +12V on the green wire of the 20pin cable when reverse gear is engaged (not all vehicles are compatible), an external switching signal from the reverse gear light is required. As the reverse gear light's power supply isn't voltage-stable all the time, an ordinary open relay (e.g AC-RW-1230 with wiring AC-RS5) or filter (e.g. AC-PNF-RVC) is required. The diagram below shows the connection type of the relay.

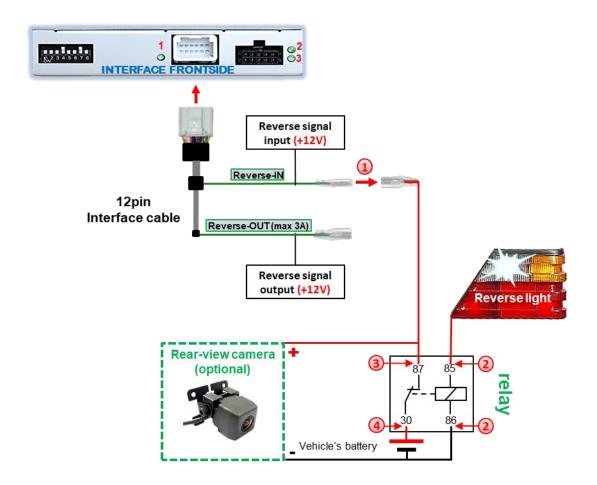

Disconnect the green cable's pre-connected male- and female connectors of the 20pin cable and connect the green input cable "Reverse-IN" to the output connector (87) of the relay.


Note: Not least to avoid short circuits, the best solution should be, to crimp a male 4mm connector to the relay's output cable and connect it to the green cable's female 4mm connector. The output-cable "Reverse-OUT" remains disconnected as it's out of function.

- 2 Connect the Reverse light's power-cable to coil (85) and the vehicle's ground to coil (86) of the relay.
- 3 Connect the output connector (87) of the relay to the rear-view camera's power-cable, like you did it to the green "Reverse-IN" cable before.
- 4 Connect permanent power / 12V to the relay's input connector (30).

 2




2.6. Connection - external keypad

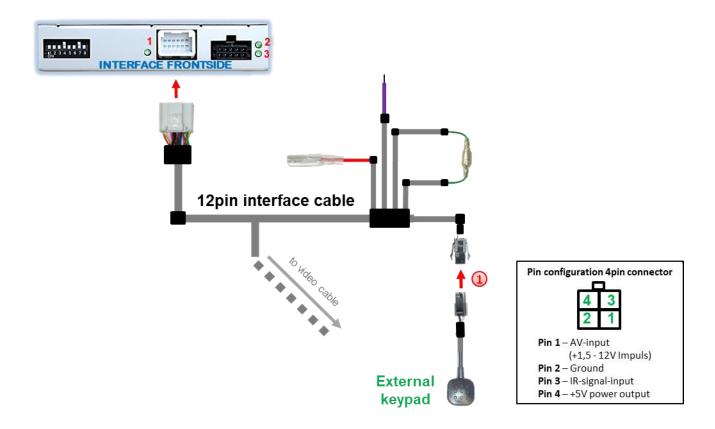

Onnect the keypad's female 4pin connector to the video-interface's male 4pin connector.

Note: Even if the switching through several video sources by the keypad mightn't be required, the invisible connection and availability is strongly recommended.

2.7. Picture settings and guide lines

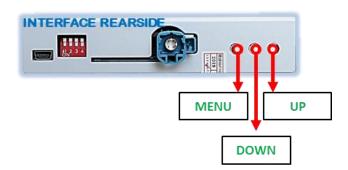

The picture settings can be adjusted by the 3 buttons on the video-interface. Press the MENU button to open the OSD settings menu. To switch to the next menu item, pressing UP and DOWN will change the selected value. The buttons are embedded in the housing to avoid accidental changes during or after installation. The picture settings have to be done separately for AV1 and AV2 while the corresponding input is selected and visible on the monitor.

Note: The OSD menu is only shown when a working video source is connected to the selected video-input of the interface.

The following settings are available:

Contrast Brightness

Saturation

Position H horizontal picture position

Position V vertical picture position

IR-AV1 (out of function)
IR-AV2 (out of function)
Guide-L Guide lines position

Guide-CNTRL - Guide lines for

rear-view camera /PDC

H-SIZE (horizontal) horizontal picture size RVC V-SIZE (vertical) vertical picture size RVC

The menu's point "UI-CNTRL" does support the

guide lines options like shown beside:

Contrast: 50

2rightne
Saturation 62
Position-H 0
Position-V 20
IR-AV1 Sanyo
IR-AV2 DVR
Guide-L 113
VI-CNTL ALLON
Guide-CNTRL 2012
H-SIZE 16
V-SIZE 16
V-SIZE 16

Options:
All ON: Guide lines and PDC will be displayed.
PDC ON: Only PDC displayed.
Guide ON: Only Guide lines displayed.

ALL Off: Guide lines and PDC will not

be displayed.

Note: If, when adjusting the guide lines (L/R), the lines do not move despite a change in value, the change can be seen after disengaging and re-engaging the reverse gear.


Note: If the vehicle's CAN communication does not support the video interface, the guide-lines cannot be used, even if they're once shown with the first operation!

 2 age22



3. Interface operation

3.1. By Navi button

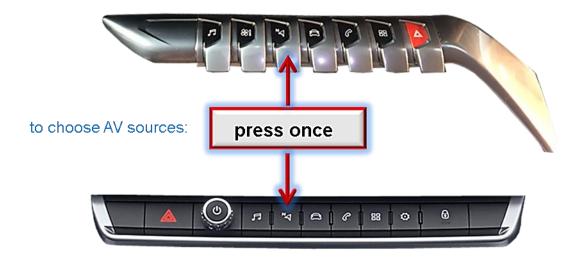


A press of the infotainment's "Navi"-button switches the input from factory mode to the inserted video sources. If, by dip switch setting, all inputs are enabled, the order is the following:

Factory video \rightarrow video IN1 \rightarrow video IN2 \rightarrow factory video \rightarrow ...

By dip switch deactivated inputs will be skipped.

 Switchover by vehicle buttons isn't possible in all vehicles. In some vehicles the external keypad has to be used.



3.2. By keypad

Alternatively or additionally to the infotainment's "Navi" button, the interface's enabled inputs can also be switched by the external keypad.

Long press of keypad (2-3 seconds)

By long pressing the external keypad (2-3 seconds), the video interfaces witches the input from the factory video to the inserted video sources. If all inputs are activated by dip switch settings, the order is the following:

Factory video
$$\rightarrow$$
 Left (V1) \rightarrow Right (V2) \rightarrow factory video

Each long press will switch to the next enabled input. Inputs which are not enabled will be skipped.

Note: The interface switches after releasing the switch (after long pressure).

Short press of keypad (only if DIP 1 is set to ON)

By short pressing the external keypad, the video interfaces witches from the factory video to the front camera input and back to factory video.

4. Specifications

BATT/ACC range Stand-by power drain Power Video input

Video input formats

Temperature range
Dimensions Video-Box

7V - 25V 4mA

290mA @12V 0.7V – 1V NTSC

-40°C to +85°C

118 x 23 x 105 mm (W x H x D)

 $^{
m age}2^{
m 2}$



5. FAQ – Trouble shooting Interface functions

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Reason	Possible solution
., ,	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
No picture/black	No power on CAN-bus box (all LED CAN-bus box are off).	Check power supply of CAN-bus box. Check CAN-bus connection of CAN-bus box.
picture (factory picture).	CAN-bus box connected to CAN-bus in wrong place.	Refer to the manual where to connected to the CAN- bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check whether CAN-bus box delivers +12V ACC on red wire output of 8pin to 6pin cable. If not cut wire and supply ACC +12V directly to video-interface.
	No picture from video source.	Check on other monitor whether video source is OK.
No picture/black	No video-source connected to the selected interface input.	Check settings dips 1 to 3 of video interface which inputs are activated and switch to corresponding input(s).
picture/white picture (inserted picture) but factory picture is OK.	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
Inserted picture totally wrong size or position. Inserted picture double or 4 times on monitor.	Wrong monitor settings of video-interface.	Try different combinations of dips 7 and 8 of video-interface. Unplug 6pin power after each change.
Inserted picture	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same standard.
distorted, flickering or running vertically.	If error occurs only after source switching: Connected sources are not set to the same TV standard.	Set all video sources to the same standard.
	Some interfaces can only	Check manual whether there is a limitation to NTSC
Inserted picture b/w.	handle NTSC input.	mentioned. If yes, set source fixed to NTSC output.
Inserted picture qual. bad.	Picture settings have not been adjusted.	
Inserted picture size slightly wrong. Inserted picture position wrong.		Use the 3 buttons and the interface's OSD to adjust the picture settings for the corresponding video input.
Camera input picture flickers.	Camera is being tested under fluorescent light which shines directly into the camera.	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.

Symptom	Reason	Possible solution
Camera input picture		Use relay or electronics to "clean" reverse gear lamp
black.	Camera power taken directly	power. Alternatively, if CAN-bus box is compatible
Camera input picture	from reverse gear lamp.	with the vehicle, camera power can be taken from
has distortion.		green wire of 6pin to 8pin cable.
		Set dip 3 of video-interface to ON (if not input AV2 is
Camera input picture	Camera input picture settings	not already activated) and connect the camera to AV2.
settings cannot be	can only be adjusted in AV2	Switch to AV2 and adjust settings. Reconnect camera
adjusted.	mode.	to camera input and deactivate AV2 if not used for
		other source.
Graphics of a car in	Function PDC is ON in the	In compatible vehicles, the graphics will display the
camera input picture.	interface OSD.	factory PDC distance. If not working or not wanted, set
camera input picture.		interface OSD menu item UI-CNTRL to ALLOFF.
Chinese signs in	Function RET or ALL is ON	Set interface OSD menu item UI-CNTRL to ALLOFF or
camera input picture	(function for Asian market) in	PDCON.
camera input picture	the interface OSD.	FBCON.
Not possible to switch	CAN-bus interface does not	Use external keypad or cut white wire of 6pin to 8pin
video sources by OEM	support this function for	cable and apply +12V impulses for AV-switching.
button.	vehicle.	cable and apply 1124 impaises for AV-switching.
button.	Dunana dikana aharat	For video source switching a longer press of about 2.5
Not possible to switch	Pressed too short.	seconds is required.
video sources by	SW-version of interface does	Use OEM-button or cut white wire of 6pin to 8pin
external keypad.	not support external keypad.	cable and apply +12V impulses for AV-switching.
Interface does not		
switch to camera input	CAN-bus interface does not	Cut the green wire of the 6pin to 8pin cable and apply
when reverse gear is	support this function for the	+12V constant from reverse gear-lamp signal. Use
engaged.	vehicles.	relay to "clean" R-gear lamp power.
	CAN-bus interface	Cut the grey wire of 6pin to 8pin and isolate both
Interface switches	compatibility to vehicle is	ends. If problem still occurs, additionally cut the white
video-sources by itself.	limited.	wire of 6pin to 8pin cable and isolate both ends.

6. Technical Support

Please note that direct technical support is only available for products purchased directly from NavLinkz GmbH. For products bought from other sources, contact your vendor for technical support.

NavLinkz GmbH distribution/tech dealer-support

Heidberghof 2 D-47495 Rheinberg

Tel +49 2843 17595 00 Email mail@navlinkz.de



10R-05 0068

Made in China

